

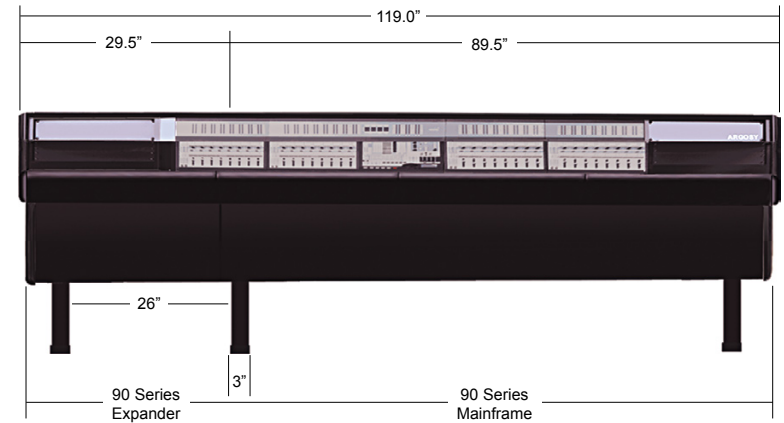
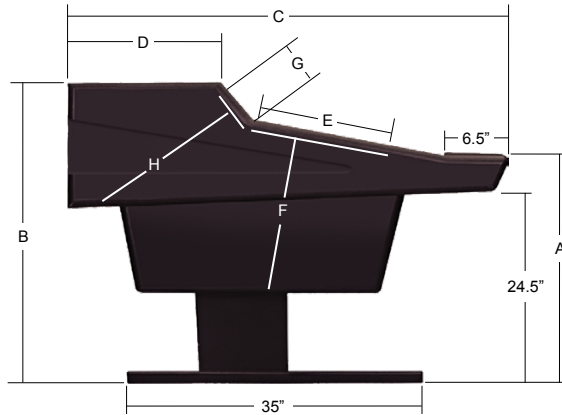


90 Series	A height	B height	C depth	D depth	E rack sp	F min. depth	G rack sp	H min. depth
for								
Digidesign® Control 24	28.5"	40.5"	42.0"	9.25"	5 sp.	15.25"	7 sp.	6"-14"
Digidesign® ProControl	29.0"	37.5"	44.5"	15.25"	8 sp.	15.5"	2 sp.	11.75"
Mackie® 8 bus	28.5"	37.5"	44.5"	15.25"	8 sp.	14.25"	3 sp.	14.25"
Mackie® D8B	28.5"	37.5"	42.0"	15.25"	6 sp.	15.75"	2 sp.	11.0"
Mackie® DXB	29.0"	37.5"	44.5"	15.25"	3 sp.	16.0"	6 sp.	8.25"
Panasonic® DA-7	28.5"	40.5"	42.0"	13.5"	7 sp.	15.25"	4 sp.	14.0"
Sony® DMX-R100	29.5"	43.7"	42.0"	13.0"	4 sp.	15.5"	5 sp.	10.5"
SoundCraft® Ghost	29.5"	37.0"	44.5"	14.0"	8 sp.	15.25"	2 sp.	13.25"
Tascam® DM24	28.5"	40.5"	42.0"	9.25"	5 sp.	15.25"	7 sp.	6"-14"
Tascam® DM3200/DM4800	28.5"	41.5"	47.0"	13.0"	10 sp.	15.75"	3 sp.	12.0"
Tascam® FW1884	28.5"	37.5"	42.0"	15.25"	6 sp.	15.75"	2 sp.	11.0"
Yamaha® DM2000	29.0"	41.0"	50.0"	11.75"	11 sp.	15.75"	3 sp.	10.75"
Yamaha® O2R/O2R.96	29.5"	41.0"	47.0"	10.00"	11 sp.	16.0"	3 sp.	9.0"

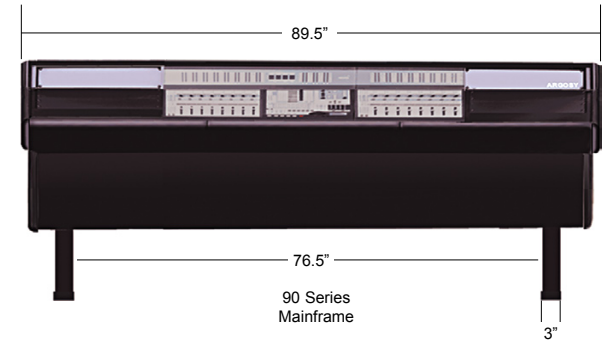

70/90 Series for Digidesign Control|24 / Tascam Dm24

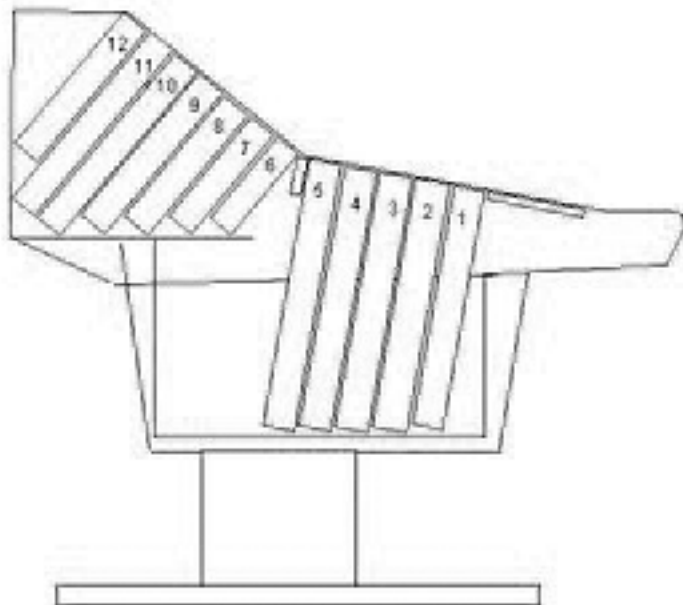

Rack Depth Restrictions

1. 370mm / 14.57"
2. 373mm / 14.69"
3. 378mm / 14.88"
4. 382mm / 15.04"
5. 388mm / 15.28"
6. 155mm / 6.10"
7. 190mm / 7.48"
8. 240mm / 9.45"
9. 285mm / 11.22"
10. 325mm / 12.80"
11. 350mm / 14.17"
12. 320mm / 12.60"